

# **SOLID PHENOLIC SHOWER INSTRUCTIONS** **HANDICAP SHOWERS**


**STEP #1 - SLIDE BACK CORNER JOINTS ONTO BACK PANEL  
AND INSERT INTO BASE.**

**STEP #2 - SLIDE SIDE PANELS INTO BACK CORNER JOINTS  
AS YOU INSERT SIDE PANELS INTO BASE**

**STEP #3 - ATTACH TOP CAP TO SHOWER CABINET WITH  
#14 x 1/2" STN. STL. SCREWS**

**STEP #4 - ATTACH FILLER STRIPS AS REQUIRED  
(SEE FILLER STRIP DETAILS)**

**NOTE: APPLY SILICONE SEALANT WHERE PANELS COME  
IN CONTACT WITH TERRAZZO BASE.  
(SILICONE SEALANT NOT INCLUDED)**

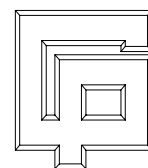

**GENERAL  
PARTITIONS** Mfg. Corp.

1702 Peninsula Drive, Erie PA  
P.O. Box 8370, Erie, PA 16505-0370  
Phone (814) 833-1154 FAX (814) 838-3473